


Instructions for the Upstream Controls

Pump Link

Pentair/Hayward pump
command translator

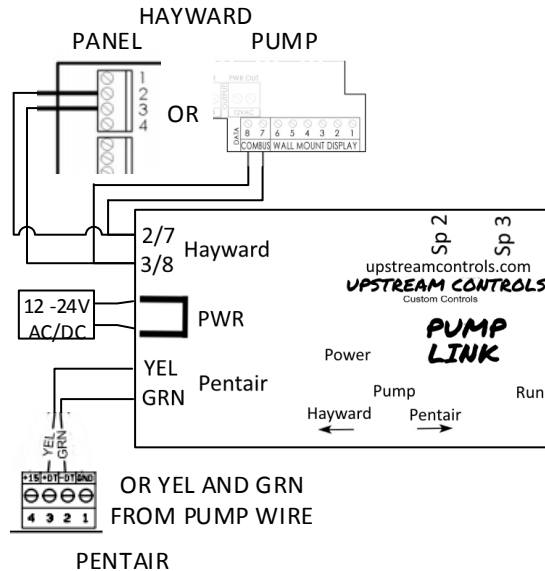

Be sure to power down your control box before doing any wiring. Using this device assumes the installer has basic electronic wiring skills.

This device can either be powered with AC or DC 12—24V.

Before powering up, the switch on the side of the Pool Link must be set to the direction of the brand of PUMP being used.

FOR HAWARD CONNECTIONS

One end of the connector connects to the Hayward device. The other end connects to the Pentair device. The Hayward connection connects to the 2 and 3 pins if it is being connected to a panel. The 7 and 8 pins if it is being connected to the pump. If you have a remote panel already wired in to the 2 and 3 pins the new wire will go into the pins along with the existing wires.

FOR PENTAIR CONNECTIONS

Pentair pumps come with a remote data cable included. Only 2 of the wires are used in this cable, the yellow and the green. These wires will get connected to the YEL(yellow) and GRN(green) terminals of the Pool Link.